


# Setting Loyverse to use iMin Cash Drawer Port

Although Loyverse normally only uses the drawer port on a printer to fire the cash drawer, it can be set to fire the cash drawer through the iMin's drawer port, when setting up the internal printer as a Bluetooth printer.

To do this, first sign in as one of the employees who can change the terminal settings. Once signed on, navigate to Settings. Ensure Printers is highlighted on the left-hand side and then click the green '+' icon at the bottom right of the screen, this will take you to the *Create printer* screen. Firstly, give the printer a name. For Printer model, choose **Other model**. For Interface, choose **Bluetooth**. On the new line that appears below, click the **Search** button. This should search and then give you the option **BluetoothPrinter**, select this. Paper width can remain at **80mm**. You will also want to set the option *Print Receipt and Bills* to **on**. It should look the same as below:

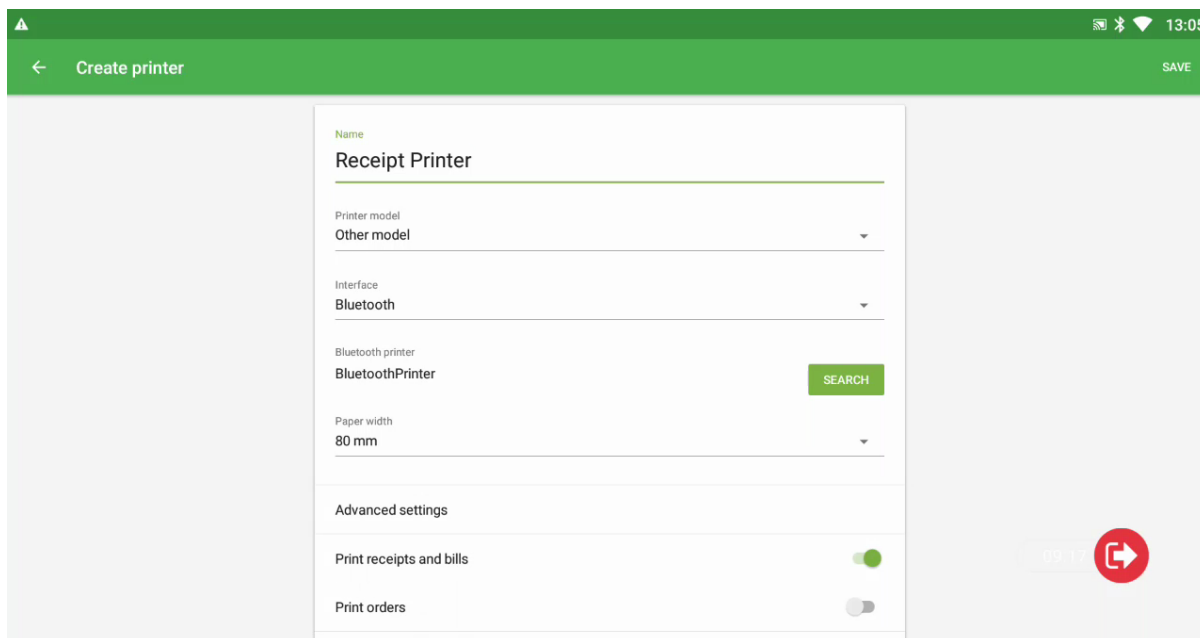


The screenshot shows the 'Create printer' screen in the Loyverse app. The screen has a green header with a back arrow, 'Create printer', and a 'SAVE' button. The main content area is a form with the following fields:

- Name: Receipt Printer
- Printer model: Other model
- Interface: Bluetooth
- Bluetooth printer: BluetoothPrinter (with a green 'SEARCH' button)
- Paper width: 80 mm
- Advanced settings:
  - Print receipts and bills:
  - Print orders:

At the bottom right, there is a red circular button with a white arrow pointing right, and a date '09.17' is visible next to it.

Once these options have been set, click *Advanced Settings*. Under the section that says *Initial ESC/POS commands*, you will want to set the value of *Drawer ESC/POS commands* to the following value: **10,14,00,00,00**. It will automatically input the commas, so you just need to enter the numbers. It should look the same as below:

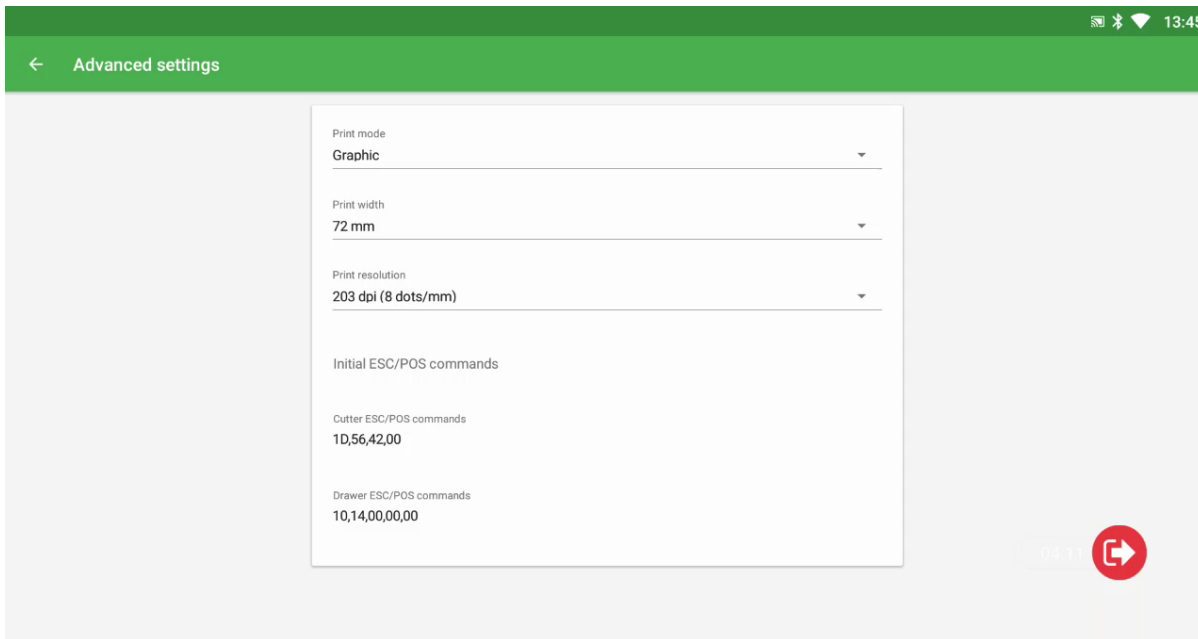

After you have inputted those numbers, click the back arrow at the top left and then hit Save. If you now return to Register mode and finalise a Cash transaction, the drawer should fire, and you should be able to print off a receipt as well.